

SELF ADHESIVE COATED LINE INSTALLATION INSTRUCTIONS

Product characteristics

The products are made of MDF with a surface of PET to apply the final color and texture.

General observations

- Use: the product is recommended only for indoor applications in walls that do not suffer from contact with water, moisture or intense heat source.
- Make a pre assembly of the products on the ground for evaluation before application. Define positioning of parts, whether vertically or horizontally, to ensure a more harmonious visual effect.
- The coatings can suffer slight hue variations from different production batches. If so, contact the supplier before installation.
- It is advisable to apply this product in the end of the work, avoiding contact with other waste such as dust, paint and other materials.
- Acclimate the product in the space it will be installed for 48 hours prior to installation. It should not be installed at a temperature below 55 degrees Fahrenheit and on a surface with more than 8% moisture.
- If you need to stock, be sure that occurs in a cover place, dry, free of insolation, and over a platform.

Wall preparation

- The wall should be finished with paint or primer, must be solid, flat, completely dry and clean.
- Internal walls with external infiltration or humidity are required to be waterproofed.
- If the surface has been recently painted be sure to wait until the surface is completely dry before installation. We recommend at least 72 hours.
- Strip off flexible coverings such as wallpaper and scrape away loose paint and clean the surface to remove any loose dirt and dust.

Tools that you will need



- | | |
|-----------------|-----------|
| 1. Circular saw | 3. Tape |
| 2. Plummet | 4. Pencil |

Installation method

ATTENTION:


Always keep a minimum $\frac{1}{4}$ " distance from the product to the floor, walls and ceiling. This is necessary to absorb the natural dilatation and contraction of wood material.

Choose your installing pattern

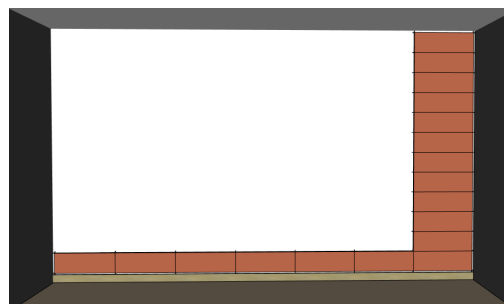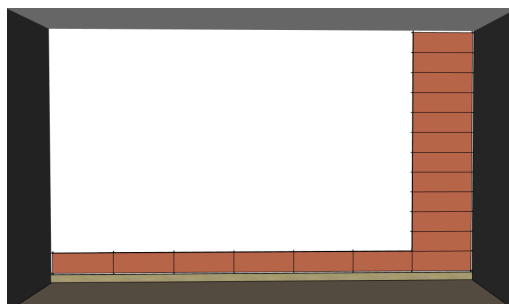


There are basically 02 visual standards for settlement of pieces: horizontal or vertical. Start by choosing which one you prefer.

1. Draw your horizontal and vertical reference lines

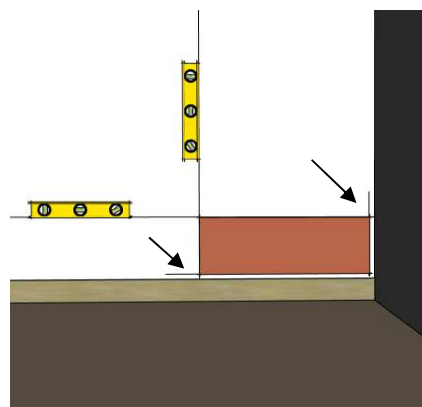


Draw a straight horizontal line and a straight vertical line on your wall to reference the first horizontal and vertical rows of pieces, always keeping a minimum distance of $\frac{1}{4}$ " for the wall and floor.

2. Start applying your reference piece

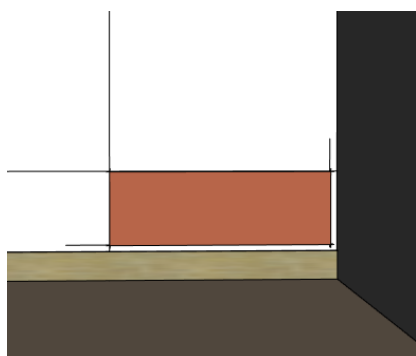


Install the first piece aligned to the horizontal and vertical reference line, in order to keep the necessary dilatation gaps.

3. Install your horizontal reference row

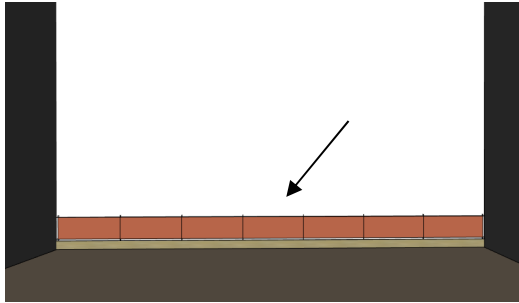


Continue to add pieces along your horizontal reference line until finishing your horizontal reference row. Keep the pieces edges straight and true to the reference line. When applying the last piece, keep the dilatation gap to the opposite wall.

4. Install your vertical reference row

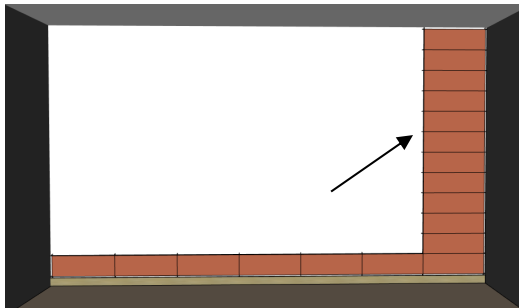

Continue to add pieces along your vertical reference line until finishing your vertical reference row. Keep the pieces edges straight and true to the reference line. When applying the last piece, keep the dilatation gap to the ceiling.

5. Finish your wall

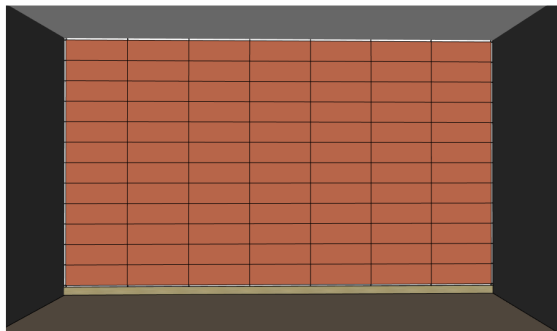

Continue to add planks working end to end keeping the joints staggered until the wall is complete.

Special Cares

When applying your piece:

- ✓ When removing the adhesive liner, avoid touching the adhesive surface. Avoid getting the adhesive surface dirty or wet;

- ✓ Align one edge along the guideline or adjacent row keeping the piece at an angle to avoid sticking to the wall. Check the alignment of the piece. Adjust as necessary;
- ✓ Gently press the piece to the wall. It takes very little pressure for the piece to stay in place;
- ✓ Check the position and when satisfied with the placement press the surface of the piece to permanently attach it to the wall.

When cutting your piece:

- ✓ Use an appropriate circular wood saw;
- ✓ Mark out the reference cut line on the back of the piece, over the adhesive protector liner;
- ✓ Make the cut on the back side of the piece, aligned to reference cut line.

Finishing accessories

Our line of products provides a corner finish that can be used, if you want.

Cleaning

You can use a soft cloth, a duster or vacuum cleaner. If necessary, use a lightly moistened cloth.

Warranty

This product has a five (5) years warranty, valid from the date of acquisition and covers manufacturing defects, provided that the installation and use comply with the requirements of this manual.

For more information contact us through the site www.decopainel.com.br or telephone 55 48 3437 4488.